

A2 Woofer Replacement Instructions


Woofer Removal

1. Remove the 6 Screws on the Rear of the A2




2. Remove Amplifier(active)/Backplate(passive)
3. Disconnect white connector from amplifier(active), Disconnect Quick connects from backplate(Passive). There may be some black glue on the connector, if you have trouble getting the connector off a small knife or razor may b used to cut the glues seal to the connector



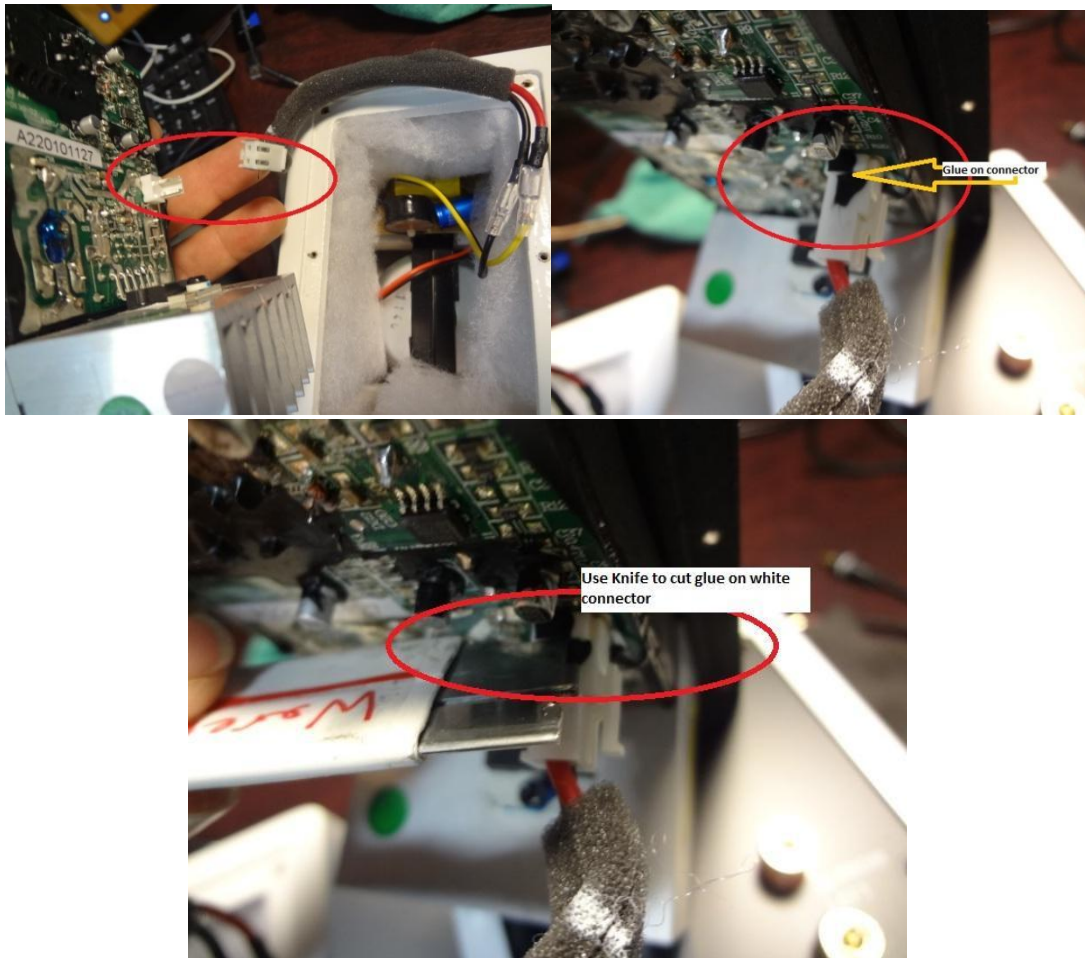


4. Remove White cabinet foam

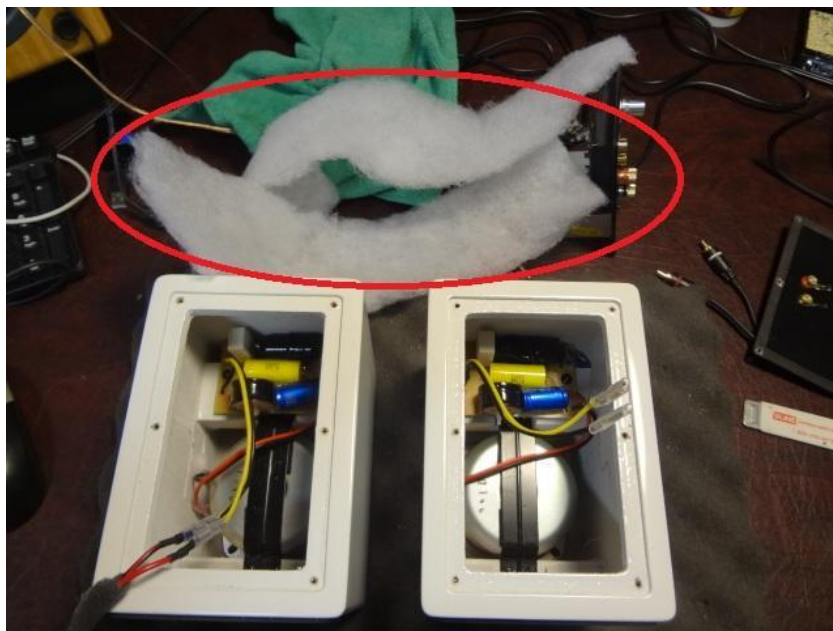


5. Remove screws (2) from crossover holding crossover to cabinet.



6. Carefully remove the crossover being sure not to disconnect tweeter and woofer from their respective quick connects. Use a small cloth to drape over cabinet then set the crossover on top of the cloth on cabinet.


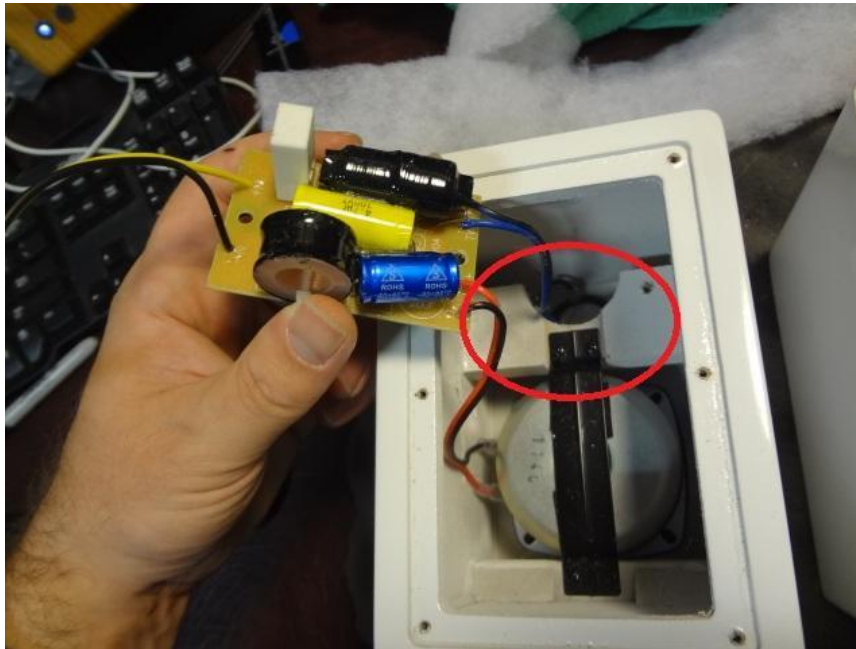


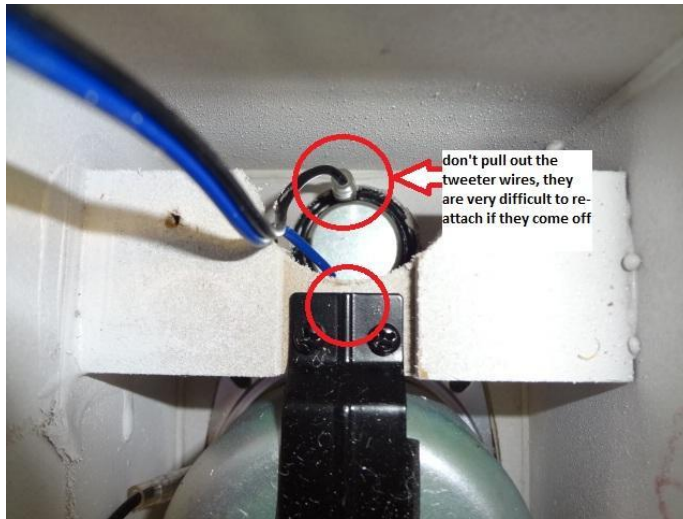


7. Remove 4 Screws from the woofer bracket that is holding the woofer in place.



8. Remove Bracket
9. Carefully lift woofer out of its mold in the cabinet front, moving woofer towards the top of the cabinet exposing bottom of the woofer.
10. Lift bottom of woofer out first and woofer should clear bottom of cabinet, rotate woofer until cone and magnet are parallel to cabinet sides and now woofer should be easily removed from the cabinet.

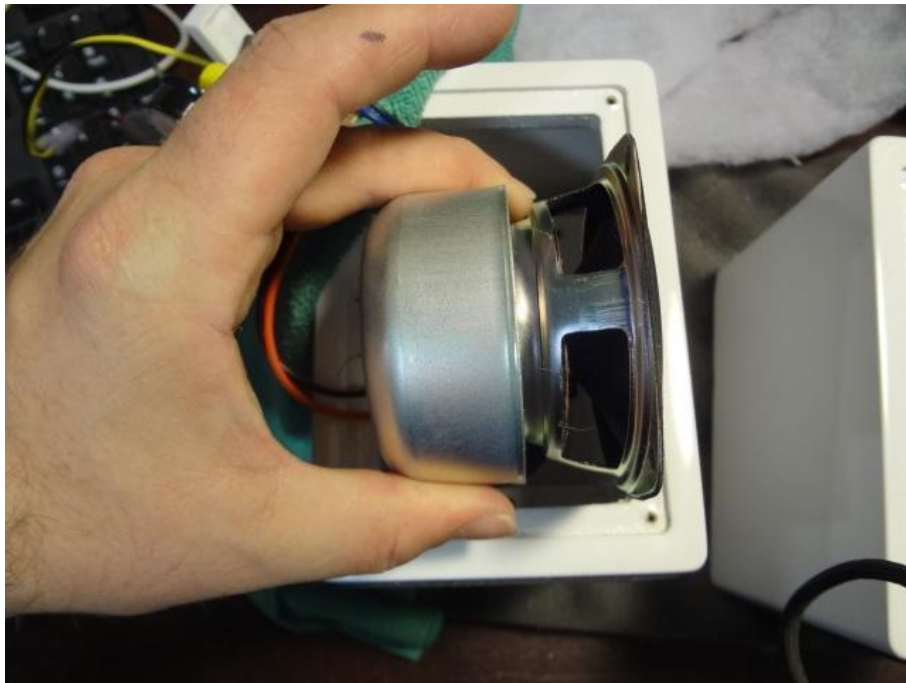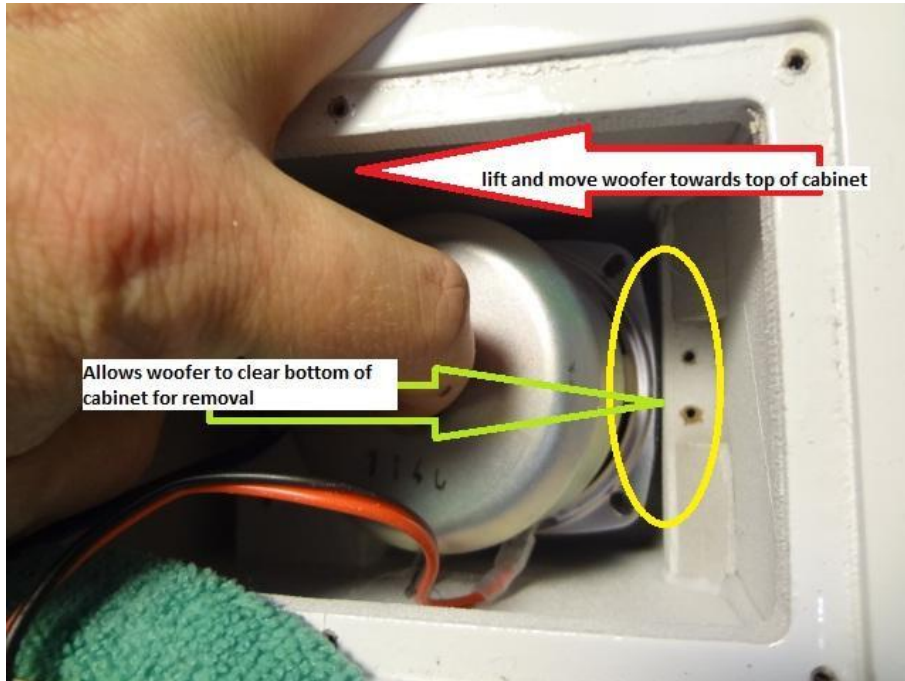


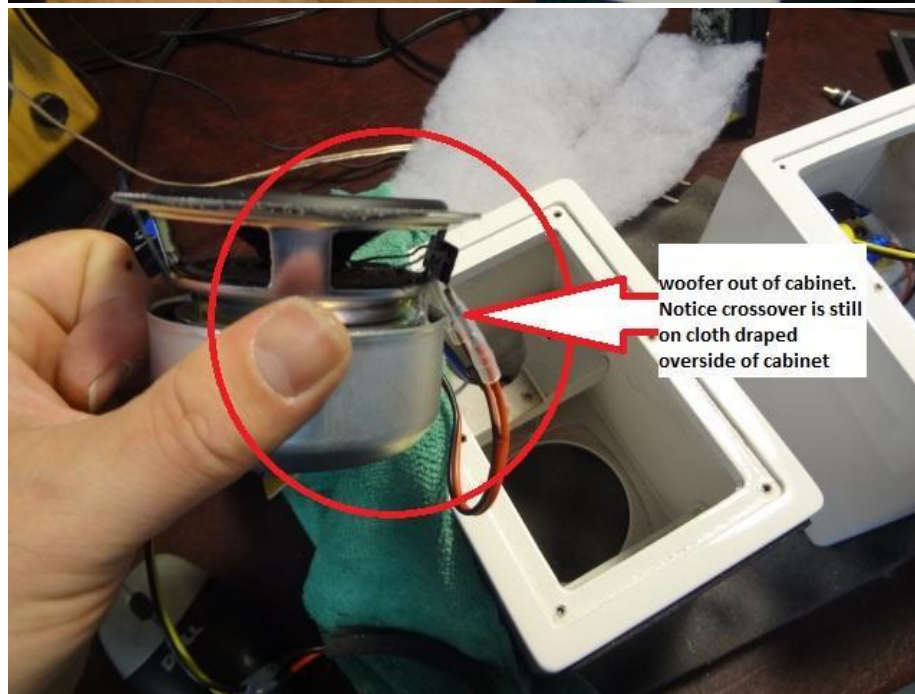


11. Disconnect wires from woofer carefully so not to disconnect them from the tweeter still inside the cabinet

Woofer Installation


1. Connect wires to new woofer Red(+), Black(-)
2. Turn woofer so the wires will be on the side of the woofer after installation

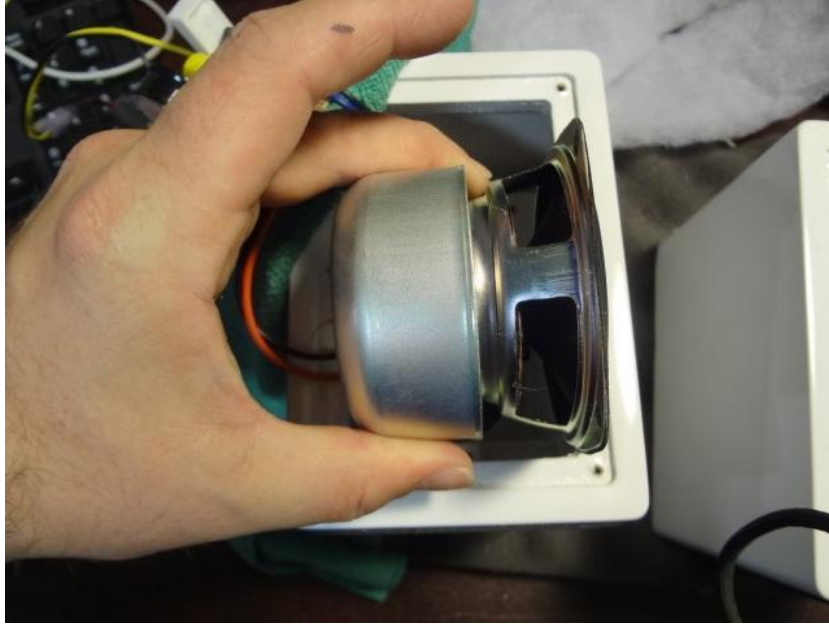


3. Slowly lower woofer into cabinet moving slightly towards top of cabinet making sure the bottom of the woofer will clear bottom of the cabinet and allow for installation to front of Cabinet

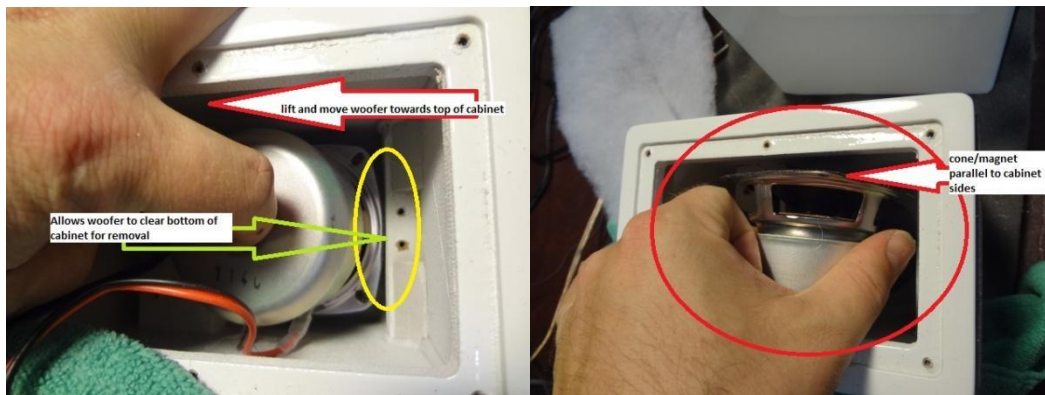

4. Set woofer inside its molded area on cabinet front, making sure the woofer is seated all the way into the molded area. This will make the woofer centered

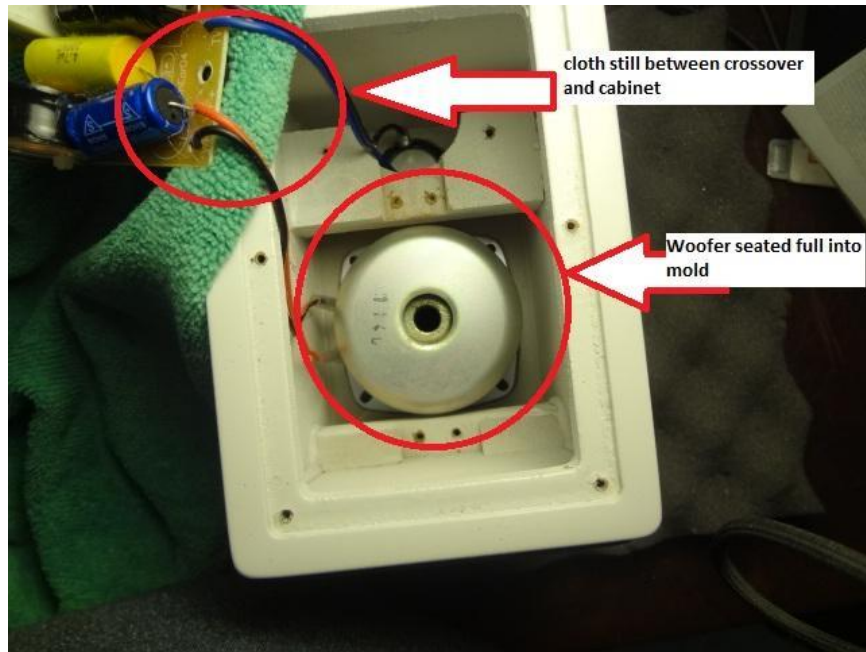

5. While holding the woofer in the mold inside the cabinet, it may be good to check the front/surround alignment before reinstalling woofer bracket.
6. Once woofer is seated snug in mold place bracket across woofer and screw the 4 bracket screws in 1 on one end at a time and on opposite sides from the last.

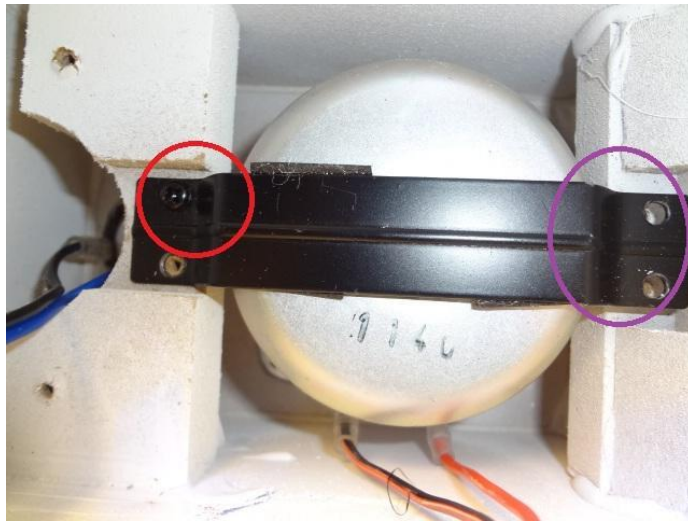



7. Next Carefully replace the crossover to its original position and add both of its screws . Be careful not to screw too tight, you may damage the crossover. Next reinstall the white cabinet foam.



8. Finally, connect White Connector to amplifier (Active), Wires (Red/Black) to Back panel and seat the amp/backplate on the back of cabinet and install the last 6 screws



9. All Done. Ready to Rock!